

MYKITA.COM


MYKITA

MYKITA GROOVE SOFTENER

The MYKITA Groove Softener is a special whetstone made for organic lenses. Use it to smooth the sharp inner edges of the groove after milling. This reduces the chance of breakage during the lens fitting process.

How to use:

Place the tool on a flat surface and position the lens at a 45° angle to the edge. Now pull the lens groove along the edge of the tool in a rotating motion.

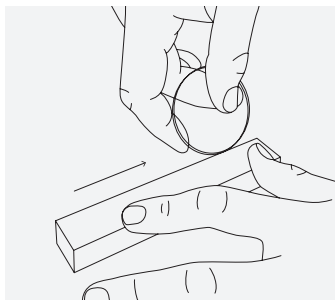

MYKITA GROOVE SOFTENER

Der MYKITA Groove Softener ist ein Spezial-Schleifstein für Kunststoffgläser. Nutzen Sie das Werkzeug zum Brechen der scharfen Nutinnenkanten nach dem Fräsen, um so die Gefahr eines Glasbruchs während der Verglasung zu vermeiden.

Anwendung:

Stellen Sie den MYKITA Groove Softener auf eine ebene Fläche und positionieren Sie das Glas in einem 45° Winkel zum Werkzeug. Ziehen Sie nun die Glasnut mit einer leichten Drehbewegung entlang der Kante.

